



REGISTER A PNS-T1365 TRANSMITTER IN AN PN-R17-1 RECEIVER

STEP 1 - REGISTER THE TRANSMITTER

- Start the transmitter by pressing and holding in the “ON” button for 3 seconds
The transmitter top LED 2 lights (green when the battery capacity is good, red when the battery capacity is poor).
- Release the “ON” button
LED 2 flashes green to indicate the transmitter is “ON”.
- Press and HOLD IN buttons ↑ & ↓
LED 2 flashes green.

While still holding down the buttons on the transmitter move to Step 2

STEP 2 - IN THE RECEIVER

- Press & Release the FUNCTION Button (F)
Function LED lights Red
- Press & Release the SELECT Button (S)
All Relay LED's light Red
If successfully registered the 5 relay LEDs will flash three times

2 ERASE A TRANSMITTER FROM A RECEIVER

IN THE RECEIVER

- Press & Release the FUNCTION Button (F)
Function LED lights Red
- Press & HOLD DOWN the SELECT Button (S)
All Relay LED's light Red, keep pressing until all LED's go out (approximately 5 seconds)
The Transmitter is now ERASED from the Receiver